

Y O L O B O X

YoloBox User Manual

## IMPORTANT

Before using YoloBox, please carefully read this handbook which includes warnings and attentions. We enables you to continuously use YoloBox if guided by this handbook. However, it is not applicable to the following cases:

- \* Unauthorized maintenance or replacement of parts;
- \* Damages caused by accidents, including but not limited to lightning, fire or exposed to humidity;
- \* Out-of-range use of permitted supply voltage;
- \* Unauthorized modification of product label or unapproved removal of warranty label.

### Attentions



Warning electric shock

Please return your YoloBox to manufacturer for any repairment or replacement.



Please use the power adapter provided by manufacturer and follow the rated voltage range.

### Product Description

## Warnings

- Please ensure that no liquid will splash on the product and no container filled with liquid will be put on the product.
- Do not plug up the vent in case of electric shock. Do not uncover the product or insert anything to the vent.
- Please put the product on the flat surface.
- Keep the product ventilated and away from direct sunlight or any heat source.
- Do not expose the product to humidity or fire.
- Manufacturer will not take charge of any accident caused by using non-standard power adapter.

 
YoloBox -----




Power Adapter -----



USB Charge Cable -----



2 Type A HDMI Cable -----

 

Hotshoe Mount -----



Storage bag -----





YoloBox User Manual -----



SIM Card Eject Pin -----



## Packing List

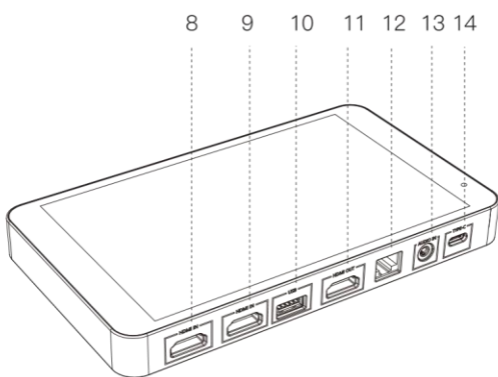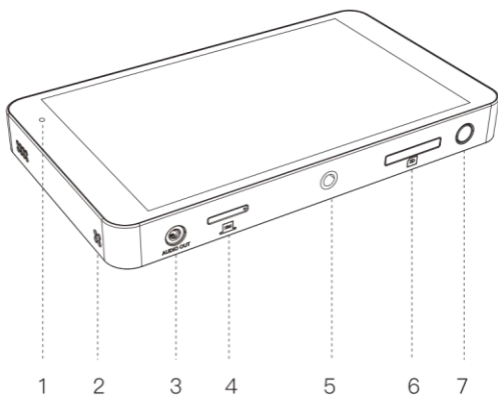  

Product Overview

1. Status Indicator
2. Vent
3. AUDIO OUT
4. SIM Card Holder
5. 1/4 Screw Hole
6. SD Card Holder
7. Power Button
8. HDMI IN 1
9. HDMI IN 2
10. USB Port
11. HDMI OUT
12. Ethernet
13. AUDIOIN
14. USB-C



DVs



DSLRs



DVs



Video Library  
or Another YoloBox



HDMI to USB3.0  
Adapter

HDMI

HDMI

USB

Pull




4G  
Ethernet  
WIFI

Stream

SD Card

Multi Platforms


## Register and Login Your YoloLiv Account:



**Email**

Enter email address:

Next



Enter the verification code

8

Resend

< Back



## Register and Login Your YoloLiv Account:



### Set password

Enter password

At least 6 characters in length and must contain both numbers and letters.

Next



### Email

zenka@yunxi.tv

### Password

 
Enter password

[Forget?](#)


Login

[< Back](#)



Prepare to Live:

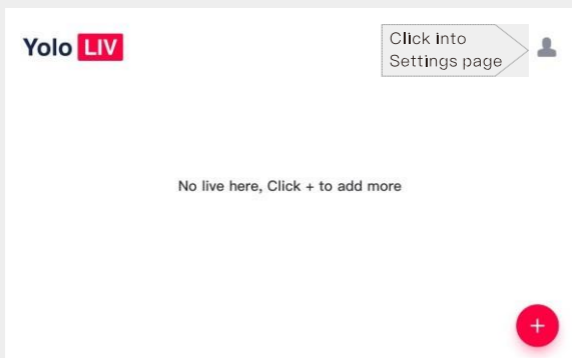


Add Your Social Media Accounts:

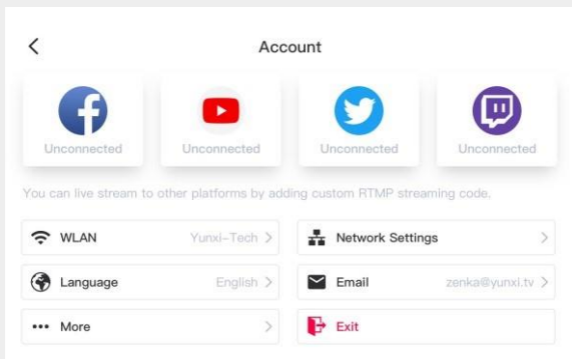 


# Add Your Social Media Accounts:

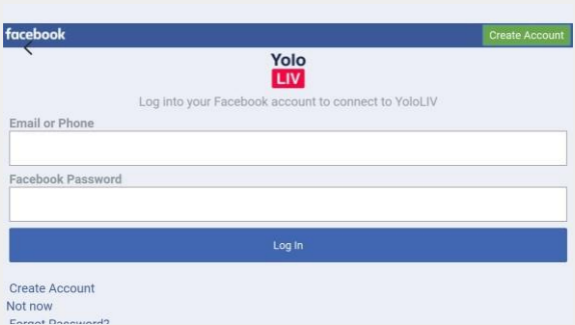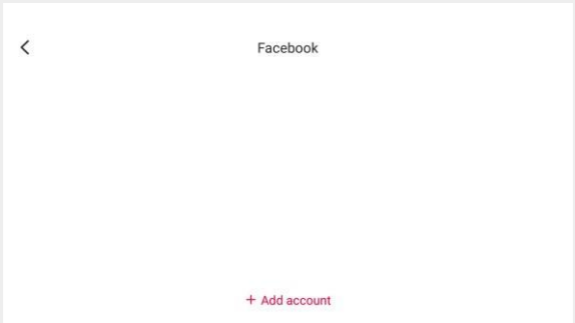  


## Add Your Social Media Accounts:

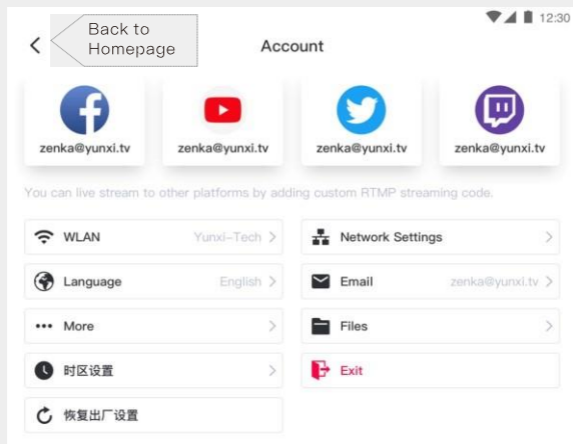 


## How to Create Live Stream:

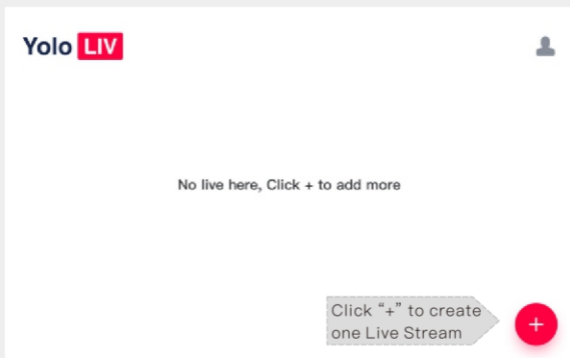 


## Setting Live Broadcast Information:

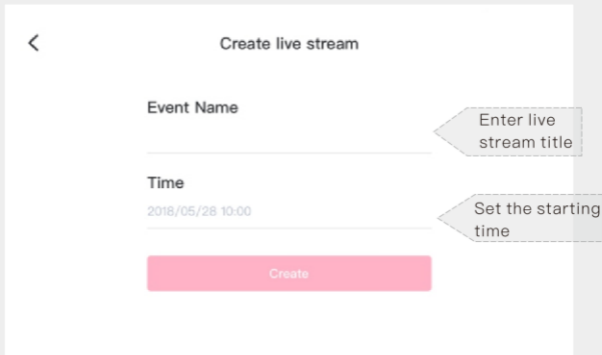 


Ready to Live Stream:

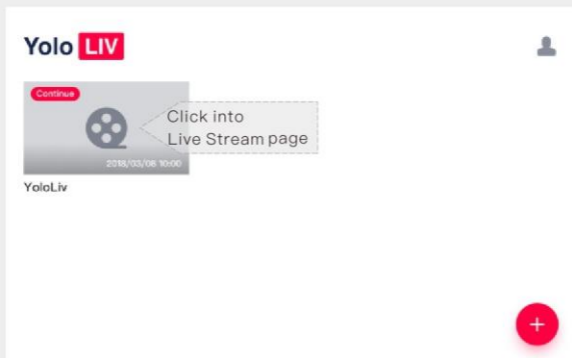 


Start Live Stream:

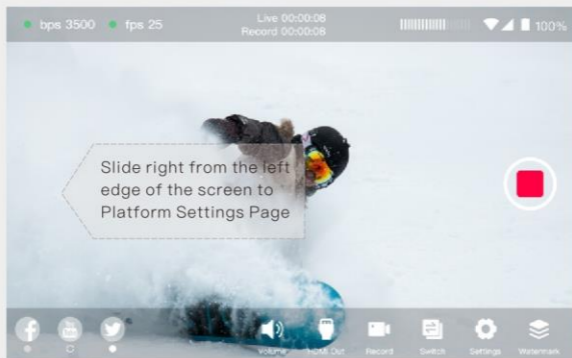 



Choose platform to live stream :

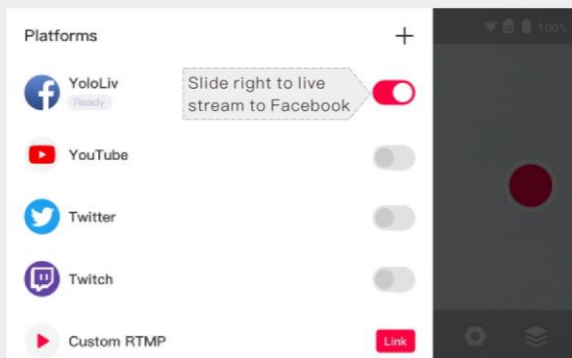 

Add More Platforms:

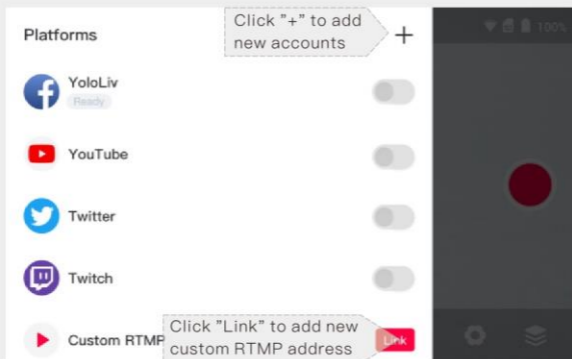 

## Custom RTMP:

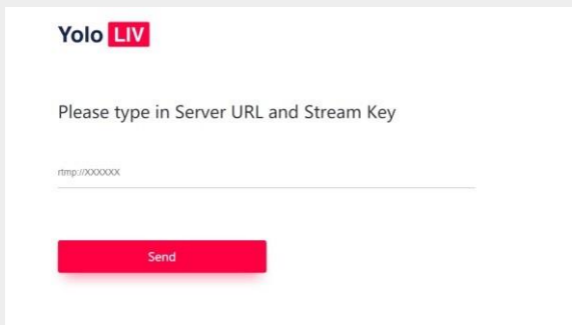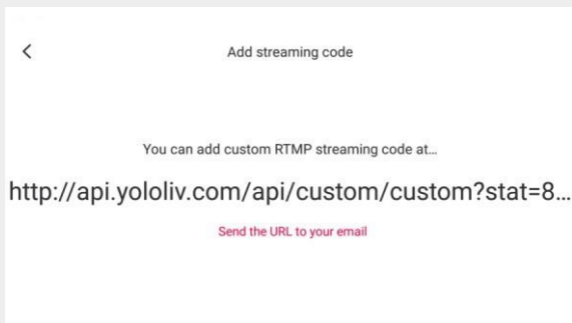  


You will receive an email as below to type your custom RTMP address





Custom RTMP:

**Yolo LIV**

 Successful


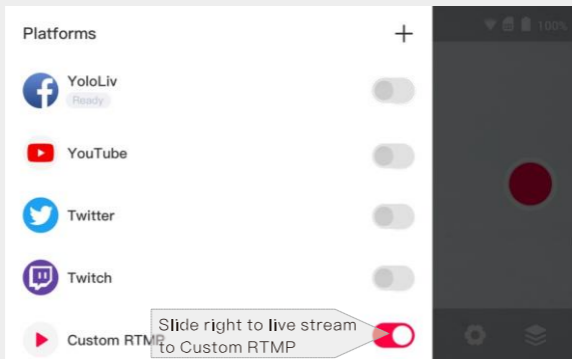


## Switch Video Source:

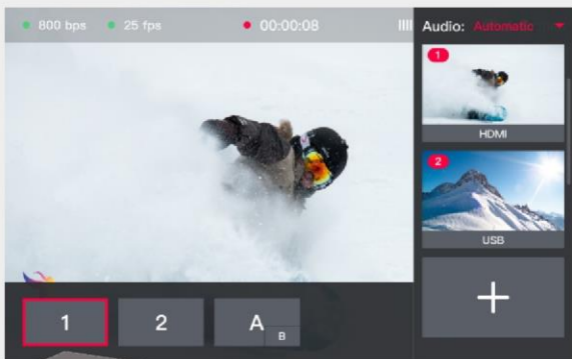 
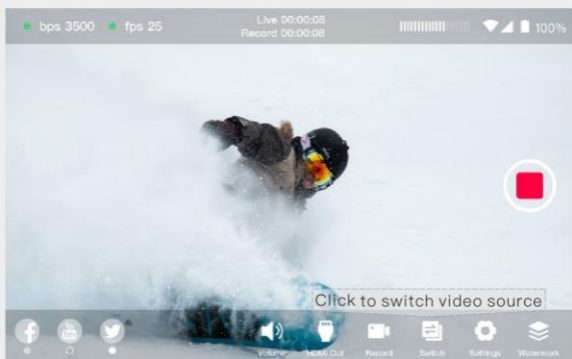 


Click to switch the video source you want to live stream.



## Switch Video Resolution :

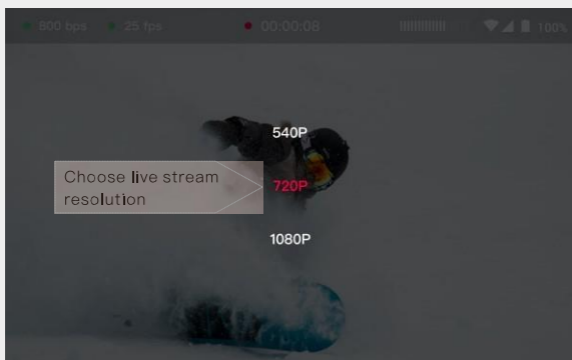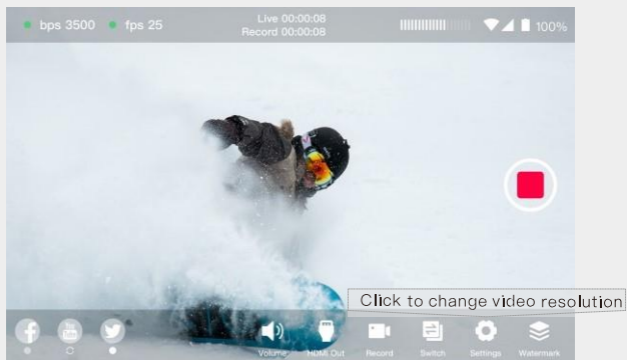  


# Watermark Template:

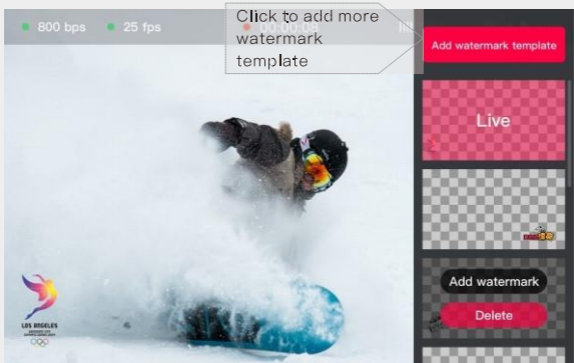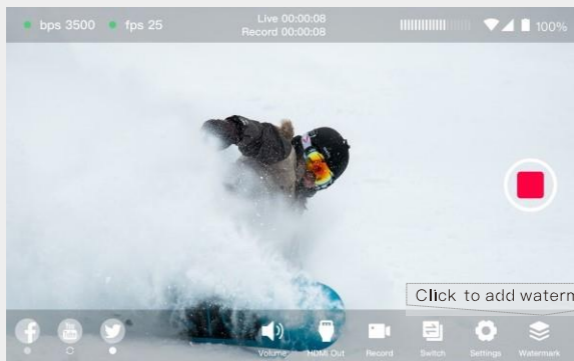  


## Watermark Template:

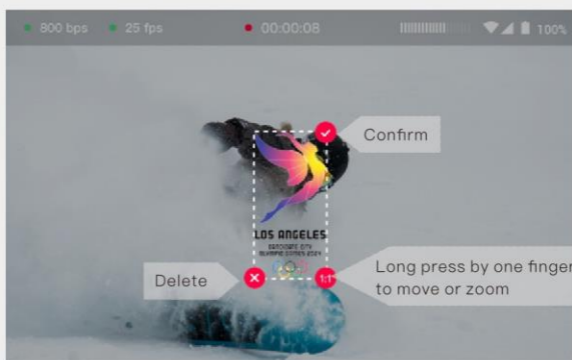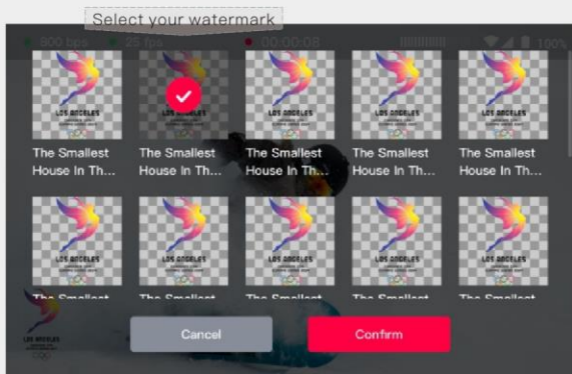  



## Watermark Template:

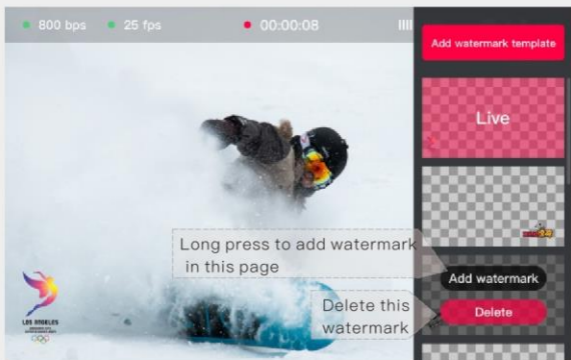 



## Pic in Pic:

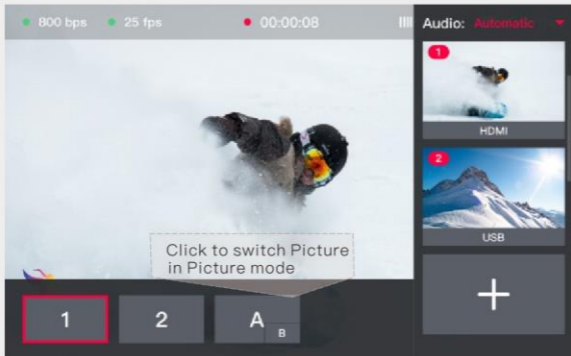 

## Pic in Pic:

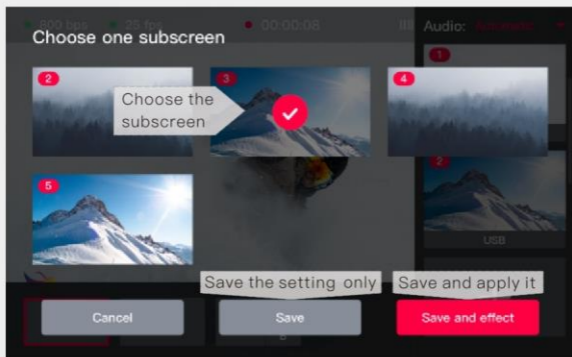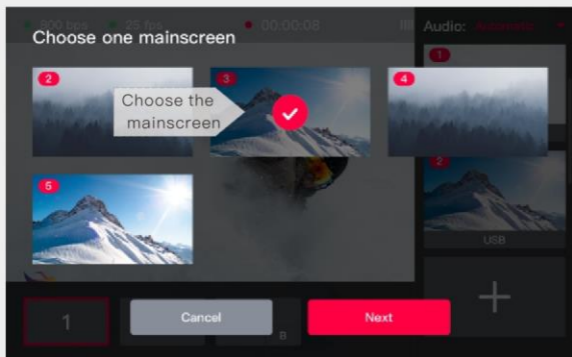  


## Add Video Sources:

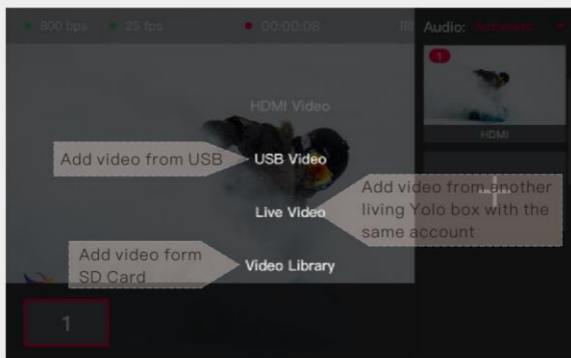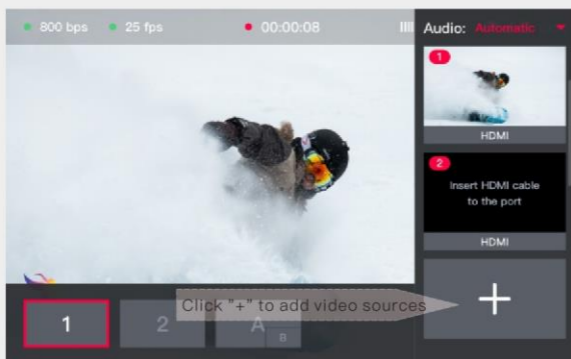  




## Delete Video Sources:

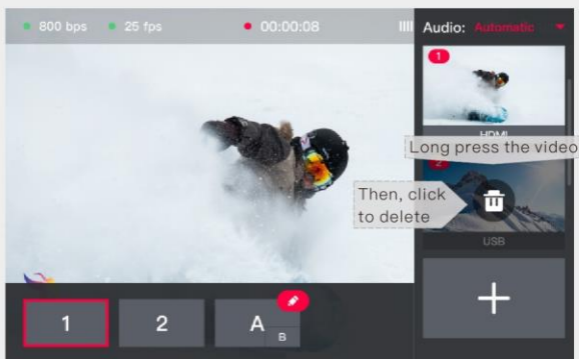 

## Choose Audio Sources:

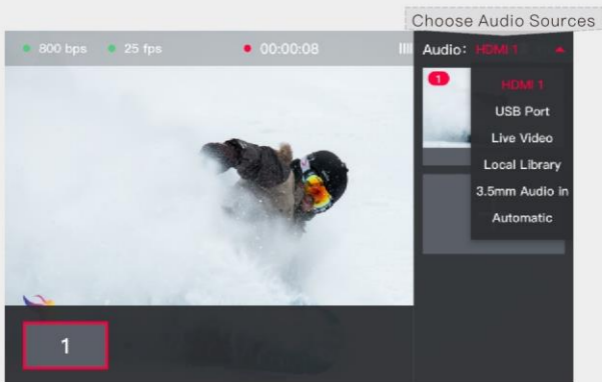 


## Volum Adjustment:




## Microphone support:

Brand	Model
BOYA	WM8
SONY	URX-P03
COMICA	CVM-WM100
	WM200(A)
	WM300(A)
 
## HDMI loop-through:

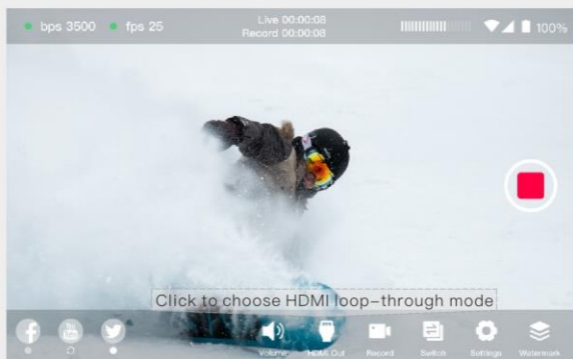

## Record:

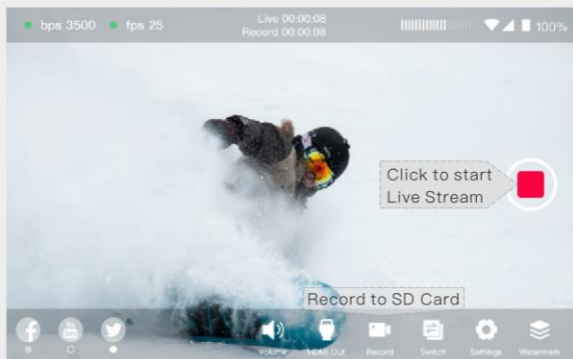 

Interfaces	HDMI IN 1; HDMI IN 2; USB 3.0(For camera connect); HDMI OUT; Ethernet; Audio in(3.5mm); USB-C(For charging); Audio out(3.5mm); Micro SIM Card Holder; 1/4 Screw Hole; SD Card Holder
Rated Voltage Range	3.6~8V
Power	< 7W
Battery Capacity	5700mAh
Net Weight	480g
Dimensions	(LxWxH) : 185x107x19.5mm
Video Input Format	HDMI IN 1: 540p 50 720p 50/59.94/60 1080i 50/59.94/60 1080p 23.98/24/25/29.9/30/50/50.94/60 HDMI IN 2: 540p 50 720p 50/59.94/60 1080i 50/59.94/60 1080p 23.98/24/25/29.9/30 USB: 540p 50 720p 50/59.94/60 1080i 50/59.94/60 1080p 23.98/24/25/29.9/30
Live Broadcast Resolution	540p/720p/1080p
Audio Input Format	32kHz/44.1kHz/48kHz/16-bit
Video Encoded Format	H.264
Audio Encoded Format	(AAC)48K
Wi-Fi	2.4G/ 5G
4G Network	NA: Band 2/4/5/7/12/13/17/25/26/41 AP: Band 1/3/5/8/34/38/39/40/41
Operating Temperature	0°C~40°C
Operating Humidity	15%~85%, No Condensation
SDCard format	FAT32
Recording format	MP4A8A6:B1A9:B17

## Specification



YOLOLIV TECHNOLOGY INC.



[www.yololiv.com](http://www.yololiv.com)



[contact@yololiv.com](mailto:contact@yololiv.com)



3326 STACEY LYN DR, LAS VEGAS, NV, 89117

#### FOLLOW US



@YoloLivTech



[yolo.liv](https://www.instagram.com/yolo.liv)



@YoloLivTech



[YoloLiv Technology](https://www.youtube.com/YoloLivTechnology)



Here is SIM Card Eject Pin.

